


## Chrysler Airtemp 3000 Series Compressors

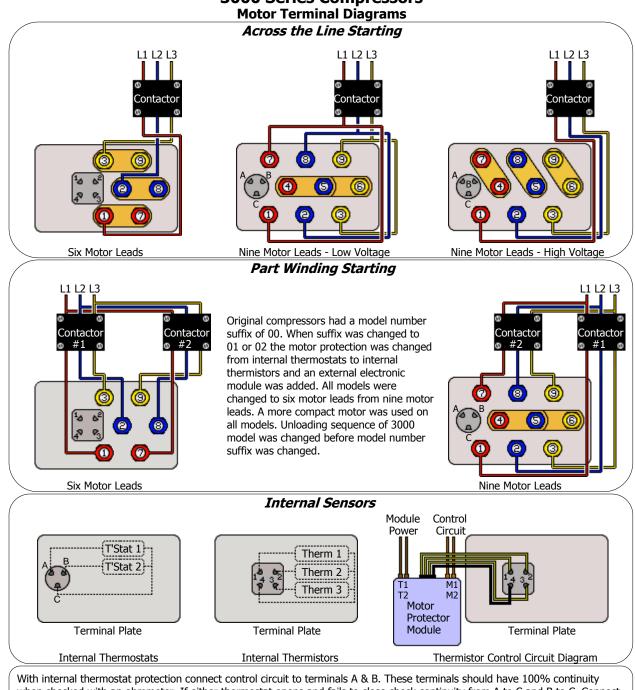

when checked with an ohmmeter. If either thermostat opens and fails to close check continuity from A to C and B to C. Connect control circuit to pair that has continuity. Internal thermistors should read between 65 and 105 ohms depending on their temperature. Module trip point is 100 ohms. Use a battery operated ohmmeter to check the thermistors. If one of the thermistors should become defective you may "jump" it with an 80 ohm ¼ watt resistor. This arrangement will reduce motor protection but will allow the compressor to operate.

8305 Sovereign Row • Dallas, Texas 75247 (800) 647-2665 tel • (214) 634-8227 fax www.dallashermetic.com Compressor Reference 2004